

---

## GP3000H Direct-connect Cable Installation Guide

---

Thank you for purchasing Pro-face's GP3000H Hard-type/Soft-type Direct-connect Cable (Hereafter referred to as "this cable"). This optional cable connects GP3000H series unit to the peripheral equipment.

---

### Safety Precautions

---

#### WARNING

- Be sure to confirm that power is not being supplied to the GP and the external devices before connecting the cable. Failure to do so can result in an electric shock.
- Do not modify the cable, since it may lead to a fire or electric shock.
- This cable is not appropriate for use with aircraft control devices, aerospace equipment, central trunk data transmission (communication) devices, nuclear power control devices, or medical life support equipment, due to these devices inherent requirements of extremely high levels of safety and reliability.
- When using this cable with transportation vehicles (trains, cars and ships), disaster and crime prevention devices, various types of safety equipment, non-life support related medical devices, etc. redundant and/or failsafe system designs should be used to ensure the proper degree of reliability and safety.

---

### Package Contents

---

- (1) GP3000H Direct-connect Cable (1)
- (2) Common Mode Filter (1)
- (3) Connector Cap (1)  
(attached to the cable connector)
- (4) Installation Guide (1) <This Guide>

This cable has been carefully packed, with special attention to quality. However, should you find anything damaged or missing, please contact your local GP distributor immediately.

---

### About the Manual

---

For the detailed information on GP3000H series, refer to the following manual.

- GP3000H Series Hardware Manual
- GP-Pro EX Device/PLC Connection Manual "GP3000H Series Connection Guide"
- GP3000H Conversion Adapter Installation Guide
- Maintenance/Troubleshooting
- GP-Pro EX Reference Manual "Hand Held GP"

The above manuals can be selected from the help menu of GP-Pro EX or downloaded from Pro-face Home Page.

URL

<http://www.pro-face.com/otasuke/>

## Types of GP3000H Direct-connect Cable

Name	Model	Description
GP3000H Hard-type 10m Direct-connect Cable	GP3000H-CBLH-10M	Heavy-duty type interface cable for communication between the GP and external equipment (e.g. host controller), equipped with common mode filter.
GP3000H Soft-type 3m Direct-connect Cable	GP3000H-CBLS-3M	Standard type interface cable for communication between the GP and external equipment (e.g. host controller), equipped with common mode filter.
GP3000H Soft-type 5m Direct-connect Cable	GP3000H-CBLS-5M	
GP3000H Soft-type 10m Direct-connect Cable	GP3000H-CBLS-10M	

### NOTE

- This cable cannot be used to connect the GP3000H conversion adapter. For details, refer to “GP3000H Conversion Adapter Installation Guide”.

## Connection with Peripheral Equipment (Specifications of the GP3000H Direct-connect Cable)

### 1. Connecting Peripheral Equipment

#### IMPORTANT

- Do not make the cable's connector fall down or hit the connector against something hard, or the connector could be damaged.
- Be sure to connect peripheral equipment first, and connect the GP unit last. Otherwise, the RS232C/RS422/RS485 circuit may fail.
- Be sure to terminate unused wires to avoid short-circuits by other signals or metal parts.
- After cable length adjustment, be sure to connect the shield on the cable to the FG terminal.

#### › Serial Interface

Recommended Cable Connector	XM2D-0901 <made by OMRON Corp.>
Recommended Jack Screw #4-40 (UNC)	XM2Z-0073 <made by OMRON Corp.>
Recommended Cable Cover	XM2S-0913 <made by OMRON Corp.>

Cable Color/ Marking Color, Number	RS232C		RS422/RS485	
	Signal Name	Description	Signal Name	Description
Brown/White 1	CD	Carrier Detect	RDA	Receive Data A(+)
Brown/Black 1	RD(RXD)	Receive Data	RDB	Receive Data B(-)
Brown/White 2	SD(TXD)	Send Data	SDA	Send Data A(+)
Brown/White 4	ER(DTR)	Data Terminal Ready	ERA	Data Terminal Ready A(+)
Brown/None	SG	Signal Ground	SG	Signal Ground
Brown/Black 3	DR(DSR)	Data Set Ready	CSB	Clear to Send B(-)
Brown/Black 2	RS(RTS)	Request to Send	SDB	Send Data B(-)
Brown/White 3	CS(CTS)	Clear to Send	CSA	Clear to Send A(+)
Brown/Black 4	CI(RI)/VCC	Called status display/ +5 V $\pm$ 5% Output 0.25 A <sup>*1</sup>	ERB	Data Terminal Ready B(-)
Green/None	FG <sup>*2</sup>	Frame Ground (Common with SG)	FG <sup>*2</sup>	Frame Ground (Common with SG)

\*1 The RI/VCC selection is switched via software. The VCC output is not protected against overcurrent. To prevent damage or unit malfunctions, use only the rated current.

\*2 Select AWG22 cable to use out of two green cables. Be sure to twist wires from a part close to the power supply.

#### IMPORTANT

- The GP3000H direct-connect cable's serial interface is not isolated. When the host (PLC) unit is also not isolated, and to reduce the risk of damaging the RS232C/RS422/RS485 circuit, be sure to connect the SG (Signal Ground) terminal.

#### NOTE

- If isolation is required, use the Pro-face's RS232C isolation unit (CA3-ISO232-01), and the following recommended equipment.

Recommended Intermediate Connector	XM2A-0901 <made by OMRON Corp.>
Recommended Fastener 1	XM2Z-0003 <made by OMRON Corp.>
Recommended Cable Cover	XM2S-0913 <made by OMRON Corp.>

#### > Ethernet Interface

Ethernet (IEEE802.3u, 10BASE-T/100BASE-TX) with modular jack connector (RJ-45)

Cable Color	Signal Name	Direction	Description
Blue	TX +	Output	Ethernet Send (+)
White	TX -	Output	Ethernet Send (-)
Brown	RX +	Input	Ethernet Receive (+)
Gray	RX -	Input	Ethernet Receive (-)

## ▷ DC24 V Interface

### ⚠ WARNING

⚠ To avoid an electric shock, prior to connecting the GP unit's power cord terminals to the power terminal block, confirm that the GP unit's power supply is completely turned OFF, via a breaker, or similar unit.

⚠ Any other power level can damage both the GP and the power supply.

⚠ Since there is no power switch on the GP unit, be sure to attach a breaker switch to its power cord.


⚠ When the FG terminal is connected, be sure the wire is grounded.

Cable Color	Signal Name	Direction	Description
Red	DC24 V	Input	Power Input DC24 V
Black	0 V	Input	Power Input 0 V
Green	FG*1	—	Frame Ground (Common with SG)

\*1 Select AWG16 cable to use out of two green cables. Be sure to twist wires from a part close to the power supply.

### NOTE

- It's recommended to use the provided common mode filter on the direct-connect cable to reduce noise.

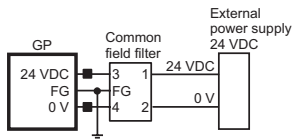

- The black square indicates the connection point for the dedicated cable and common field filter.

## ¥ Power Supply Cautions


- Input and Output signal lines must be separated from the power control cables for operational circuits.
- To improve the noise resistance, be sure to twist the ends of the power cord wires before connecting them to the power supply.
- The GP unit's power supply cord should not be bundled with or kept close to main circuit lines (high voltage, high current), or input/output signal lines.
- To reduce noise, make the power cord as short as possible.
- If the supplied voltage exceeds the GP unit's range, connect a voltage transformer.
- Between the line and the ground, be sure to use a low noise power supply. If there is an excess amount of noise, connect a noise reducing transformer.

### IMPORTANT

- Use voltage and noise reducing transformers with capacities exceeding Power Consumption value.
- Connect a surge absorber to handle power surges.

### IMPORTANT

- Be sure to ground the surge absorber (E1) separately from the GP unit (E2). Select a surge absorber that has a maximum circuit voltage greater than that of the peak voltage of the power supply.

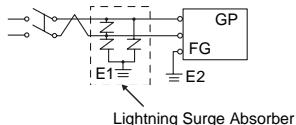


Lightning Surge Absorber

## ¥ Grounding Cautions

- Be sure to create an exclusive ground for the Power Cord's FG terminal. Use a grounding resistance of 100 Ω, a wire of 2 mm<sup>2</sup> or thicker, or your country's applicable standard.

- The SG (signal ground) and FG (frame ground) terminals are connected internally in the GP unit. When connecting the SG line to another device, be sure that the design of the system/connection does not produce a shorting loop.
- The grounding wire should have a cross sectional area greater than  $2 \text{ mm}^2$ . Create the connection point as close to the GP unit as possible, and make the wire as short, as possible. When using a long grounding wire, replace the thin wire with a thicker wire, and place it in a duct.

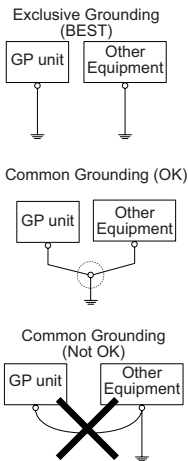

#### ¥ Input/Output Signal Line Cautions

- All GP Input and Output signal lines must be separated from all operating circuit (power) cables.
- If this is not possible, use a shielded cable and ground the shield.

#### ▷ 3-Position Enable Switch Output Interface


Cable Color/Marking Color, Number	Signal Name	Description
Blue/Black 2	ENB0A	3-position enable switch 0A (a-contact : normally open) Rating: 30 VDC, 700 mA (Minimum applicable load: 3 VDC, 5 mA)
Blue/Black 3	ENB0B	3-position enable switch 0B (a-contact : normally open)
Blue/None	ENB1A	3-position enable switch 1A (a-contact : normally open) Rating: 30 VDC, 700 mA (Minimum applicable load: 3 VDC, 5 mA)
Blue/Black 1	ENB1B	3-position enable switch 1B (a-contact : normally open)

The switch provides three positions: A position where the switch is not pressed (released), a position where the switch is pressed to the intermediate position, and a position where the switch is pressed to the innermost position (fully pressed).

When the switch is set at each position, ON/OFF status of the ENB0 to ENB1 signals are as follows:

	The switch is not pressed.	The switch is pressed to the intermediate position.	The switch is pressed to the innermost position.
ENB0	0 (OFF)	1 (ON)	0 (OFF)
ENB1	0 (OFF)	1 (ON)	0 (OFF)

\*1 The contact is OFF when the switch is fully depressed and then returned to the released position.




## › Emergency Switch Output Interface

Cable Color/ Marking Color, Number	Signal Name	Description
Purple/ Black 2	EMG0A	Emergency switch 0A (a-contact : normally open) Rating: 30 VDC, 1 A (Minimum applicable load: 5 VDC, 1 mA)
Purple/ White 3	EMG0B	Emergency switch 0B (a-contact : normally open)
Purple/ Black 1	EMG1A	Emergency switch 1A (b-contact : normally closed) Rating: 30 VDC, 1 A (Minimum applicable load: 5 VDC, 1 mA)
Purple/ White 2	EMG1B	Emergency switch 1B (b-contact : normally closed)
Purple/ None	EMG2A	Emergency switch 2A (b-contact : normally closed) Rating: 30 VDC, 1 A (Minimum applicable load: 5 VDC, 1 mA)
Purple/ White 1	EMG2B	Emergency switch 2B (b-contact : normally closed)

With the GP unit incorporating an emergency switch, the emergency switch activates the contact output, when the emergency switch is enabled. To reset the emergency stop status (lock status), pull the button forward, or turn the button in the direction indicated by arrow. When the emergency switch is pressed, ON/OFF status of the EMG0 to EMG2 signals are as follows:

( ) indicates contact status.

	Emergency Stop Reset	Emergency Stop
EMG0	0 (OFF)	1 (ON)
EMG1	1 (ON)	0 (OFF)
EMG2	1 (ON)	0 (OFF)




### NOTE

- These signal lines must be disconnected (NC) when a GP unit without an emergency switch is used.


## › Key Switch Output Interface

Cable Color/ Marking Color, Number	Signal Name	Description
Orange/ None	KEY_NC	Key Switch b-contact (normally closed) Rating: 24 VDC, 300 mA
Orange/ Black 1	KEY_NO	Key Switch a-contact (normally open) Rating: 24 VDC, 300 mA

- Turning OFF GP unit with the key switch



- Turning ON GP unit with the key switch





## ¥ Connector Pin Assignment

	Cable Color/ Marking Color, Number	Pin No.	Signal Name		Description	
<p>Protrusion Protrusion</p> <p>8 7 6 5 4 3 2 1</p> <p>D C B A</p> <p>A B C D</p> <p>(Cable side)</p>	Orange/None	D7	KEY_NC		Key Switch Output Signal	
	Orange/Black 1	D8	KEY_NO			
	Blue/Black 2	C7	ENB0A		3-Position Enable Switch Output Signal	
	Blue/Black 3	B7	ENB0B			
	Blue/None	A6	ENB1A			
	Blue/Black 1	A7	ENB1B		Emergency Switch Output Signal	
	Purple/Black 2	C6	EMG0A			
	Purple/White 3	B6	EMG0B			
	Purple/Black 1	A5	EMG1A			
	Purple/White 2	D6	EMG1B			
	Purple/None	C5	EMG2A			
	Purple/White 1	B5	EMG2B			
	Brown/White 1	D3	(When the RS232 is used) CD	(When the RS422 or RS485 is used) RDA		Serial Signal
	Brown/Black 1	D4	RD (RXD)	RDB		
	Brown/White 2	C3	SD (TXD)	SDA		
	Brown/Black 2	C4	RS (RTS)	SDB		
	Brown/None	D5	SG	SG		
	Brown/White 4	B3	ER (DTR)	ERA		
	Brown/Black 4	B4	CI (RI)/VCC	ERB		
	Brown/White 3	A3	CS (CTS)	CSA		
Brown/Black 3	A4	DR (DSR)	CSB			
Blue/None	D1	TX+		Ethernet Signal		
White/None	C1	TX-				
Brown/None	B1	RX+				
Gray/None	A1	RX-				
Red/None	C8	Power Input DC24 V		DC24 V		
Black/None	B8	Power Input 0 V				
Green/None	A8	Frame Ground (Common with SG)				

Please be aware that Digital Electronics Corporation shall not be held liable by the user for any damages, losses, or third party claims arising from the use of this product.

© Copyright 2008 Digital Electronics Corporation.  
All rights reserved.